


## ESP8266 AT Command Connection Diagram

Use this for devices WITHOUT a secondary hardware serial.

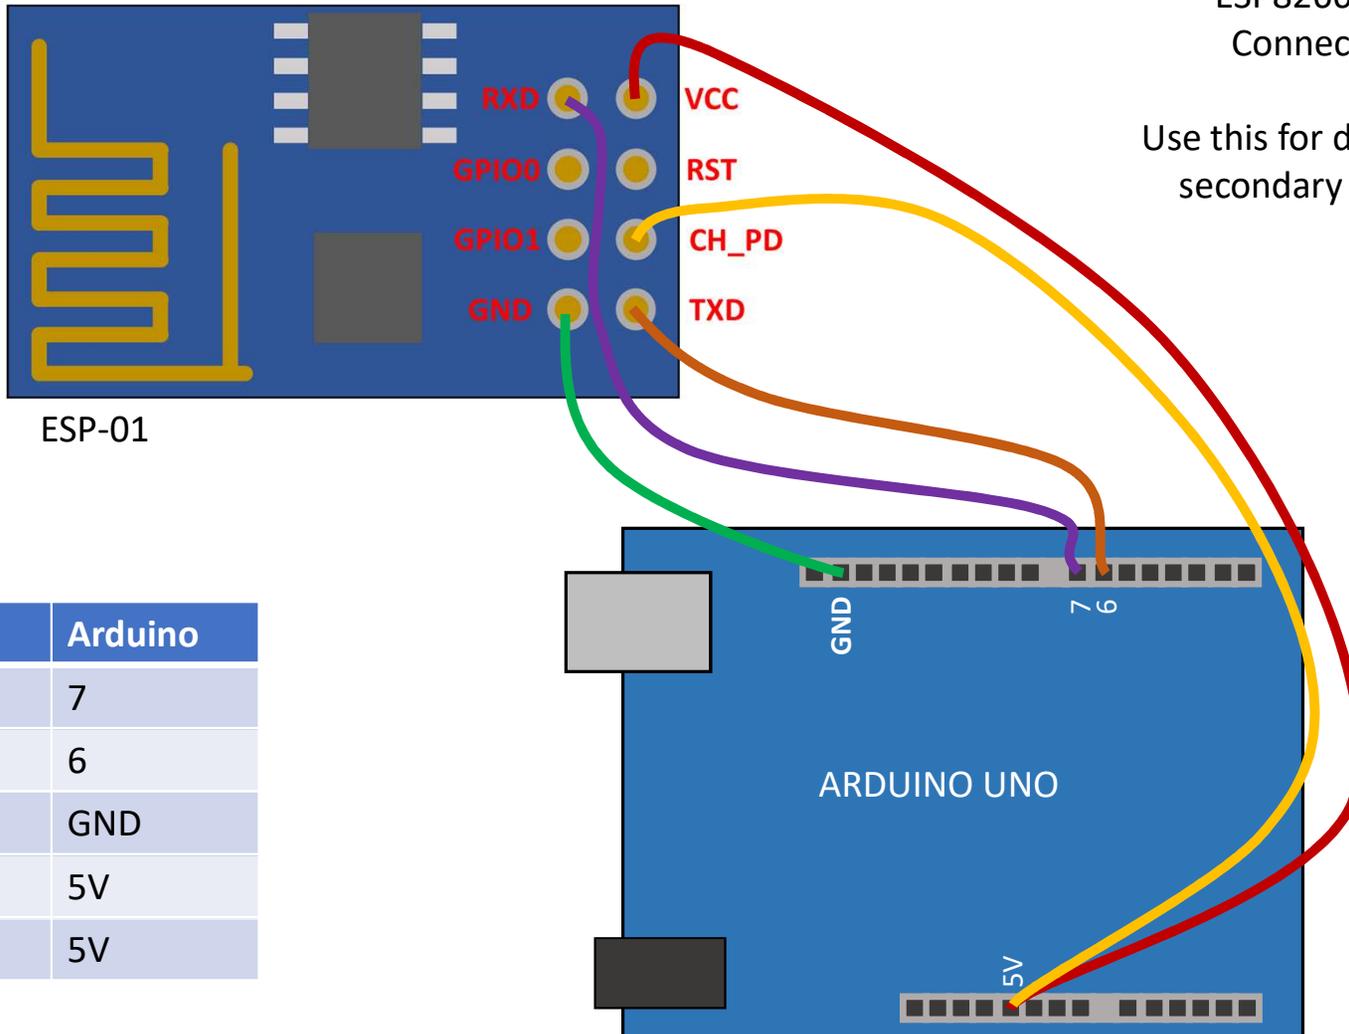

ESP-01

| ESP-01 | Arduino |
|--------|---------|
| RXD    | 7       |
| TXD    | 6       |
| GND    | GND     |
| VCC    | 5V      |
| CH_PD  | 5V      |