


ESP8266 AT Command Connection Diagram

Use this for devices WITH a secondary hardware serial (TX1/RX1).

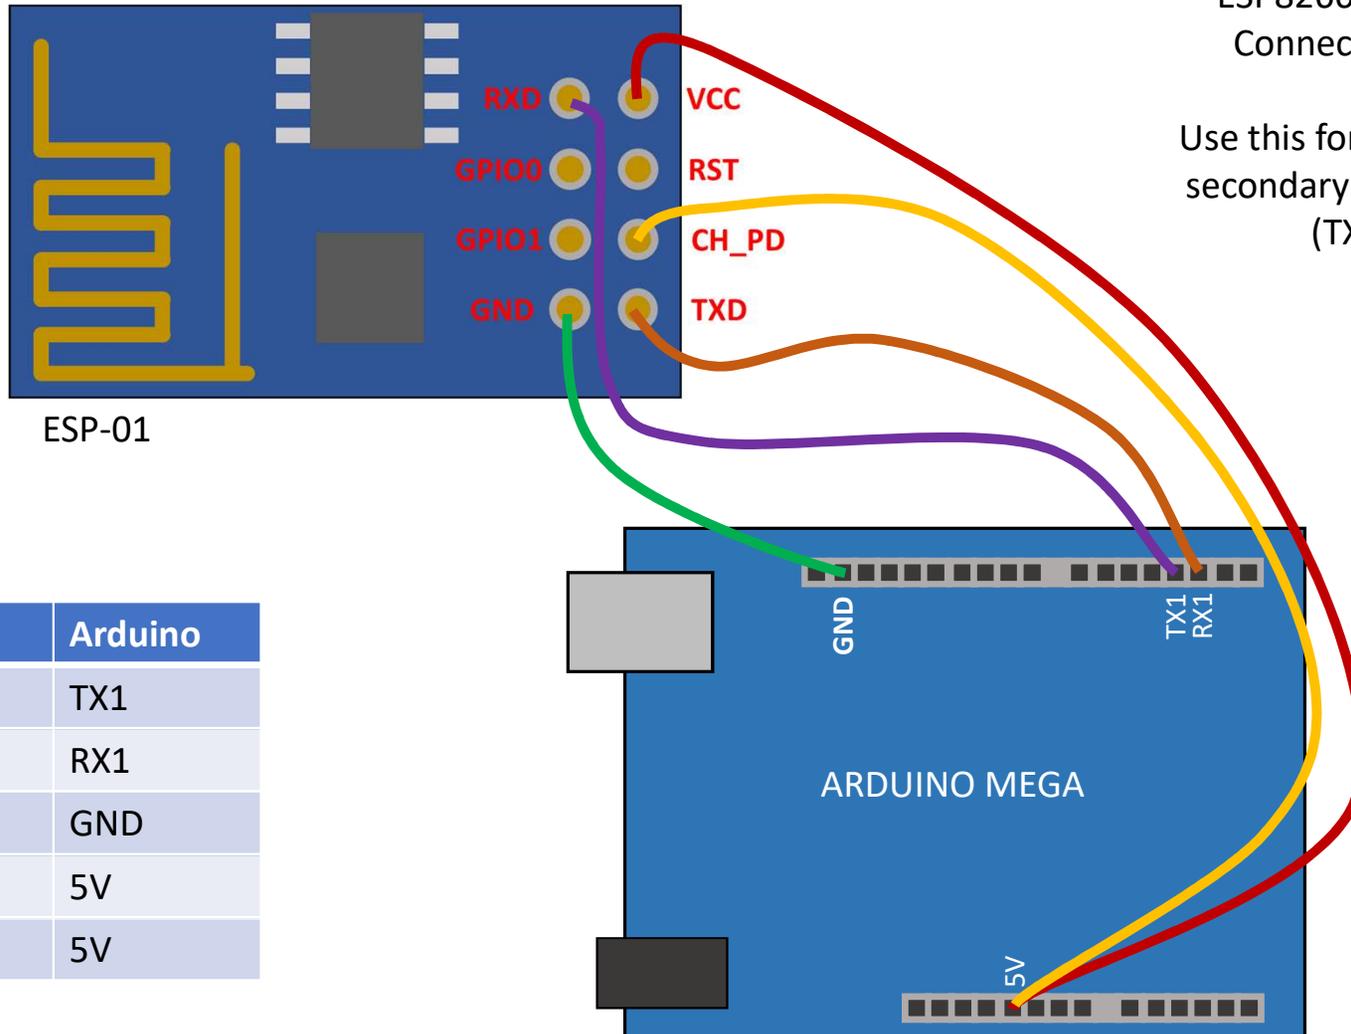

ESP-01

ESP-01	Arduino
RXD	TX1
TXD	RX1
GND	GND
VCC	5V
CH_PD	5V